


Underlay fitting guidelines




A The subfloor should be reasonably level, sound, dry and must be free from dust, grease and any other contaminants.

Nail down any loose floorboards and hammer down any nails that protrude. Fill any deep gaps in the concrete and sand down any protruding lumps.

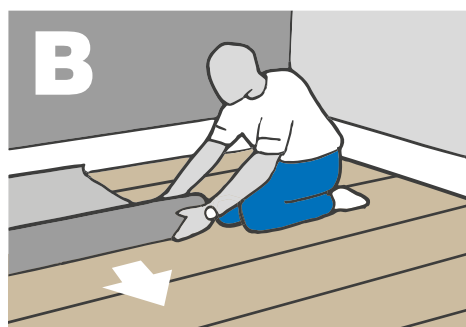


B The Floorwise Acoustica underlay can be laid either side up, although most installers prefer to lay the underlay film side showing. Lay the underlay at right angles to the floorboards.

When laying, allow for 5cm excess to run up the walls. Closely butt up the edge of adjoining rolls when laying.

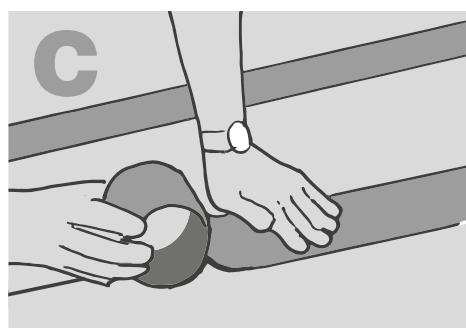


C All joins should be taped up using a single-sided waterproof tape. Firmly press the tape into place.

This then should form a moisture-resistant sub floor ready for the desired floor to be fitted.

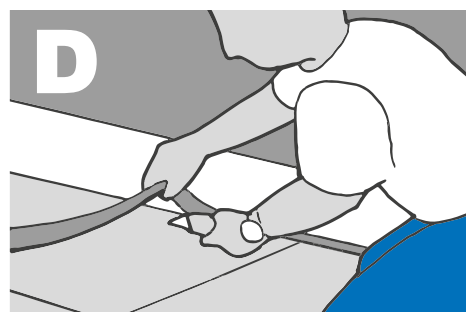

D Once the laminate or wood flooring has been laid, the excess underlay around the perimeter can then be trimmed flush with the flooring. The perimeter of the room can then be finished with skirting, scotia, etc.

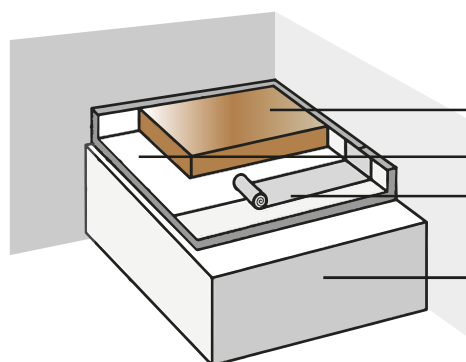

Wood/Laminate
Acoustica underlay
Single sided waterproof tape
Sub floor

it's time to get wise

about **flooring installation** with our other **market-leading** products:

When it comes to flooring installation, **Floorwise** is the name for **quality** and **value**!

For **over 40 years** Floorwise has been the **number one choice** for flooring professionals.

Reliable service, through an exclusive network of distributors, and the consistent quality of our products has earned Floorwise an enviable reputation. Floorwise strives to deliver excellence in innovation too, with a continuous development programme aimed at meeting the evolving needs of both consumers and installers alike.



find us on **@floorwisehq** or visit us at **www.floorwise.co.uk**

© Floorwise Group Ltd, 2022